




MFL-1100 Fingerprint Luggage Module

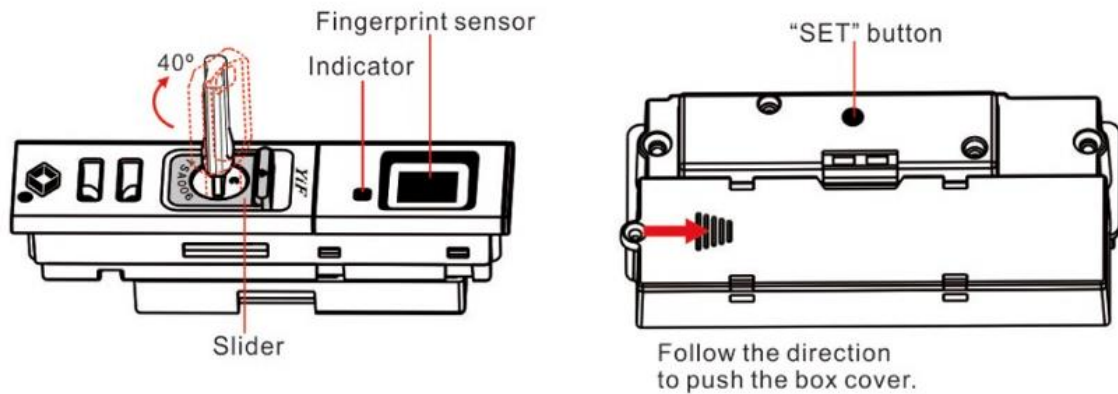

INSTRUCTION:

1. This lock supports 4 AAA alkaline batteries.
2. Before any fingerprint is registered, the lock can be open by any fingerprint.
3. 5 fingerprints could be registered in maximum.

1、Finger print registration:

1. Press the "SET" button one time shortly, the green LED will light up for around 5 seconds, touch your desire finger on the finger pad. If this finger print is recorded, green light will blink one time. Touch the same finger on the pad again within 5 seconds. Green light blinks if recorded; Same finger touch the pad the 3rd time, if green light blinks twice, then this finger print is successfully registered. You can repeat the whole process if you want to register another finger print.
2. If during the registration process, red light blinks 3 times, that means recording failed, please press the "SET" button to start again.
3. If you press the "SET" button and red light blinks, that means maximum finger print have been registered.

2、Use finger print to unlock

- 2.1 Put the registered finger on the touchpad, green light blinks a second if approved. Push the slider to unlock the puller. The lock will be locked 2 seconds after you push the slider. Or it will be relocked after 10 seconds if do not push the slider.
- 2.2 The lock has been registered and a wrong finger print applied on the touch pad, red light will blink 3 times and with green light on, indicating that a wrong finger print was applied.

3、Deleting the registered finger print

- 3.1 Long pressing the "SET" button for more than 3 seconds, green light will flash 5 times. That means all registered finger print are deleted. The lock will be in default mode.

4、Power

- 4.1 When finger touch the pad and red light flash 2 times with lock open, that means the power are low. Please replace the barriers asap.
- 4.2 Use a M2 Philips screw driver, unscrew and slide the battery box lid to access and replace the batteries.
- 4.3 If power is completed down and the luggage is locked, please use the backup key to open the lock and then replace the batteries.

- * Notice: 1. After you first time open you luggage, please make sure to take out the backup key and store in a safe place that you must remember.**
2. If you do not use the luggage for more than half year, please take out the batteries from the lock.

Contact Midas Touch

1. Facebook: Welcome to leave the message at m.me/midastouchinc
2. Email: Kindly send your inquiry to contact@midastouchinc.com
3. Inquiry form: Please drop your message to our inquiry form at <https://www.midastouchinc.com/inquiry-form/>

Follow us

- 👉 Facebook @ <https://www.facebook.com/midastouchinc>
- 👉 Instagram @ <https://www.instagram.com/midastouchinc/>
- 👉 Website: <https://www.midastouchinc.com/>

